

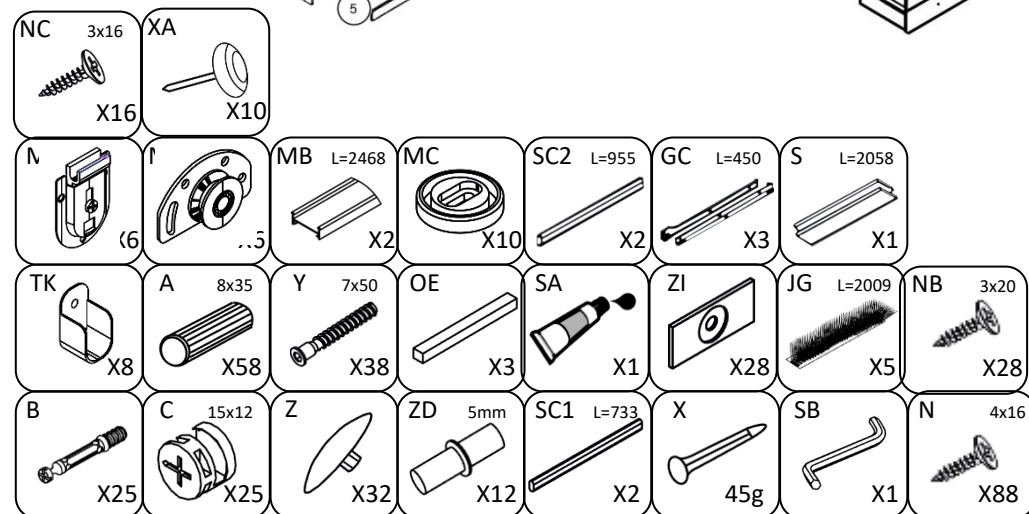
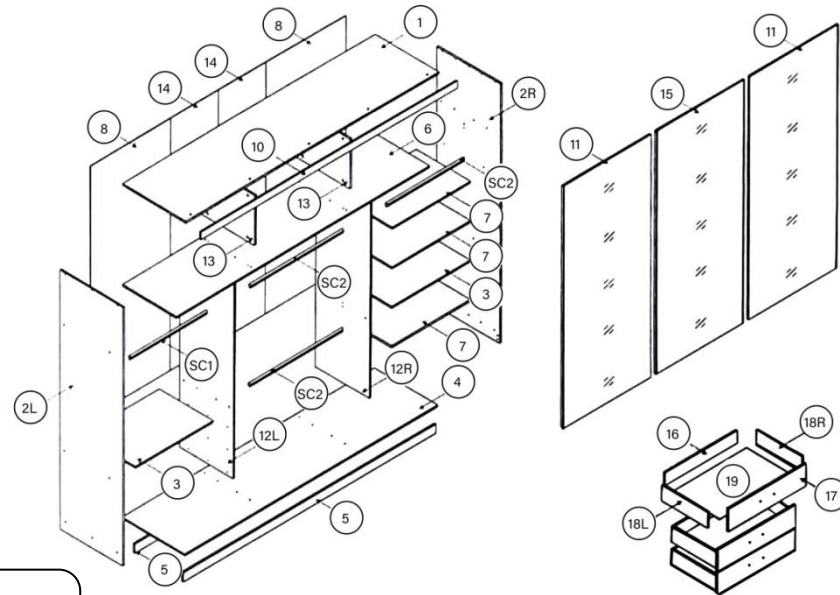


MILAN



Wardrobe 250

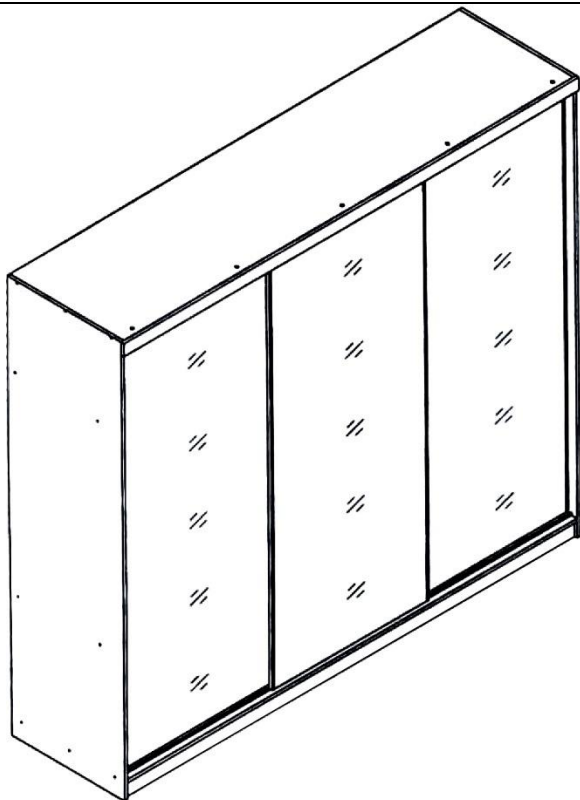

- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimatı | (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ |




1

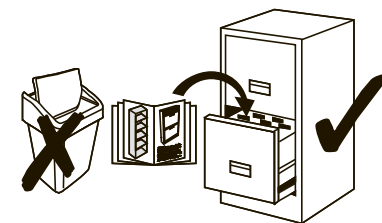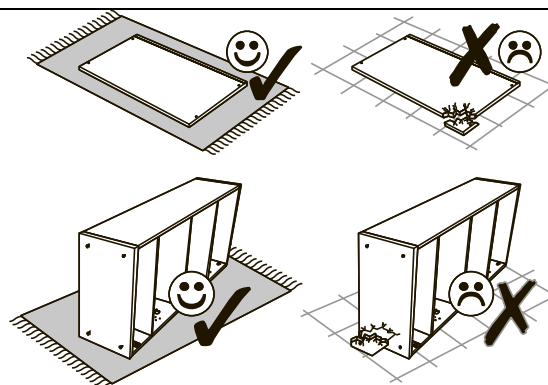

2



Front

3

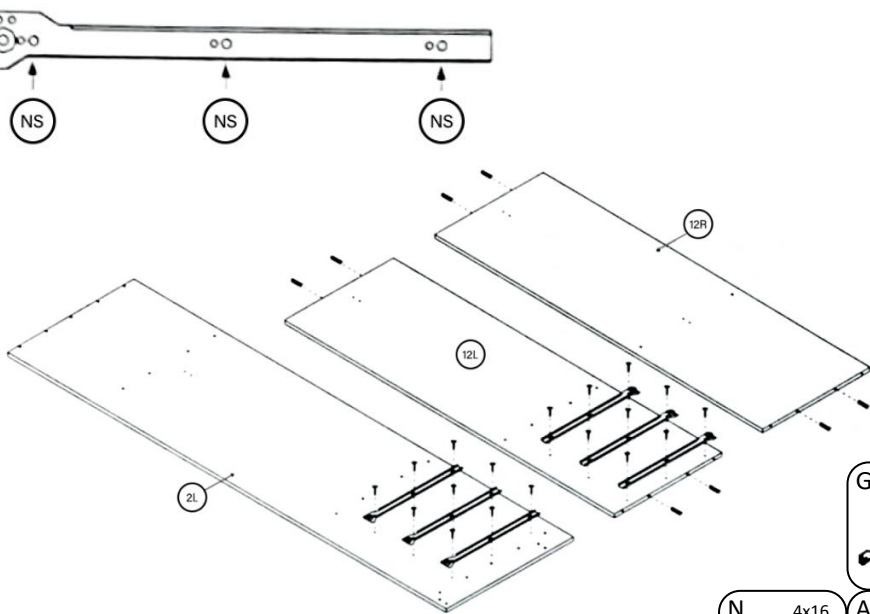


NS NS NS

2L

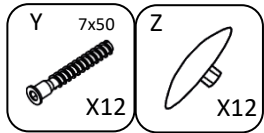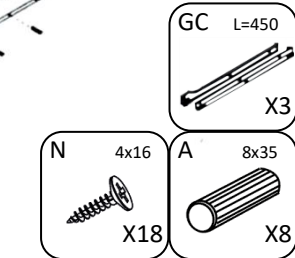

4

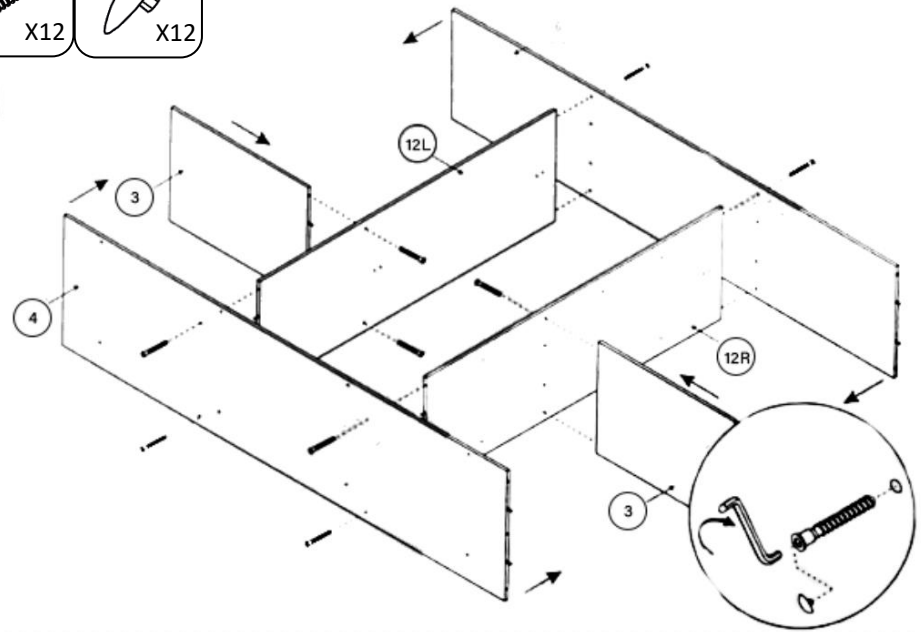


12L

3




4

12R


3

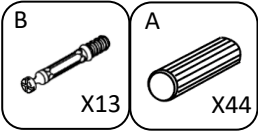

5

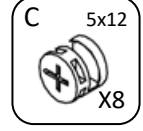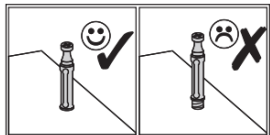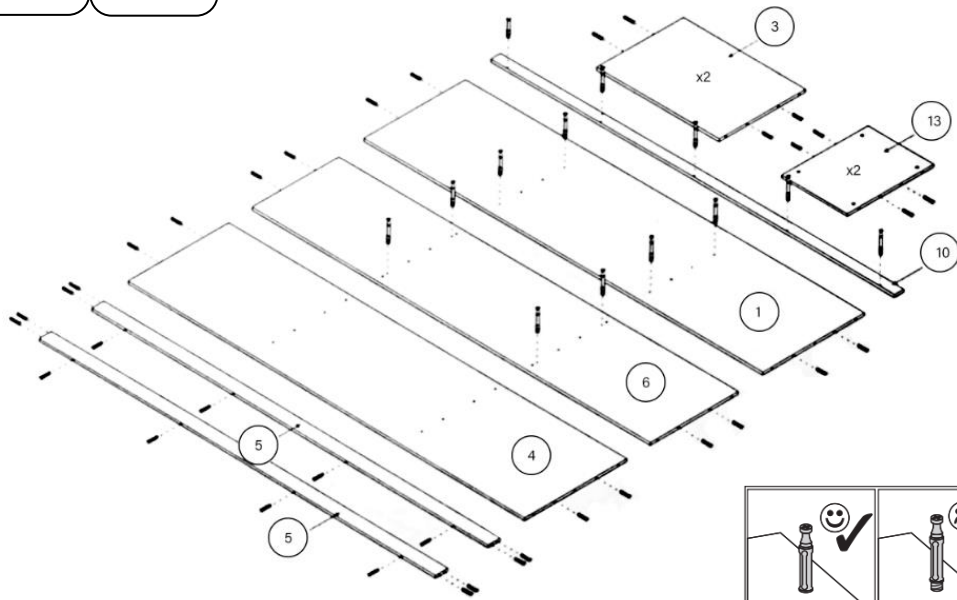


6

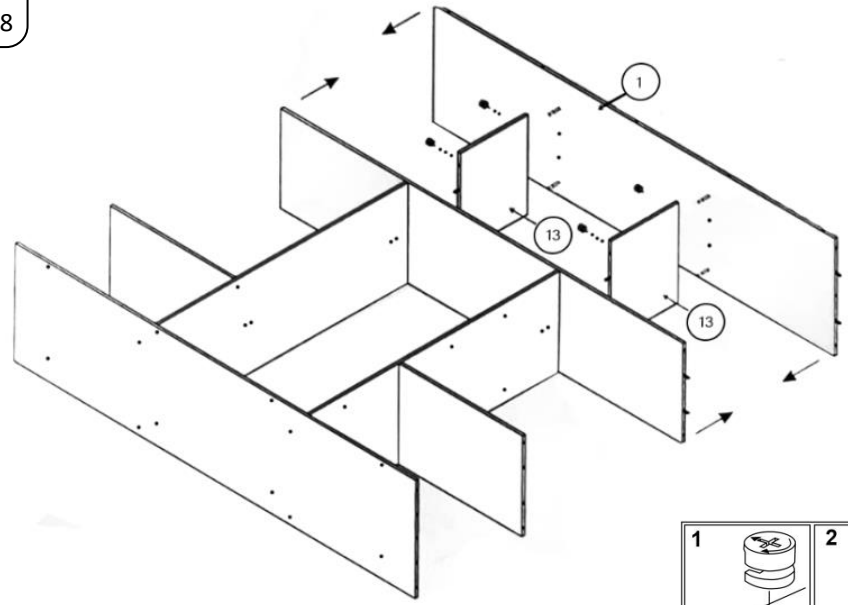


1

13



13

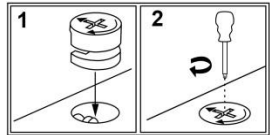


7

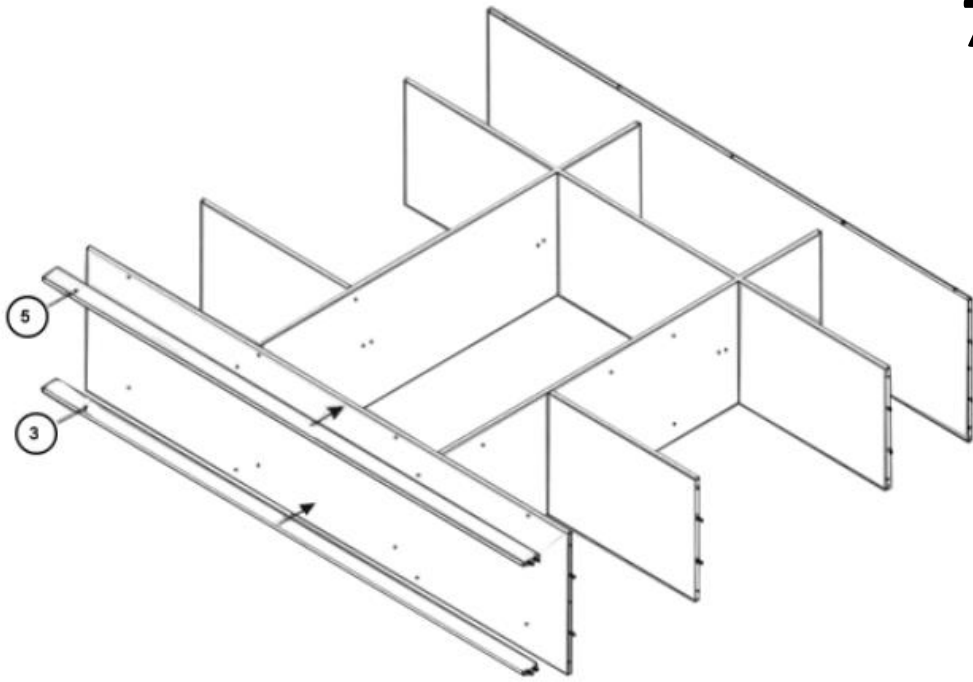

9


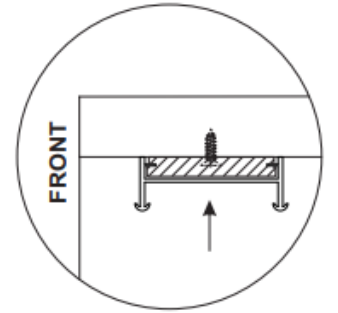
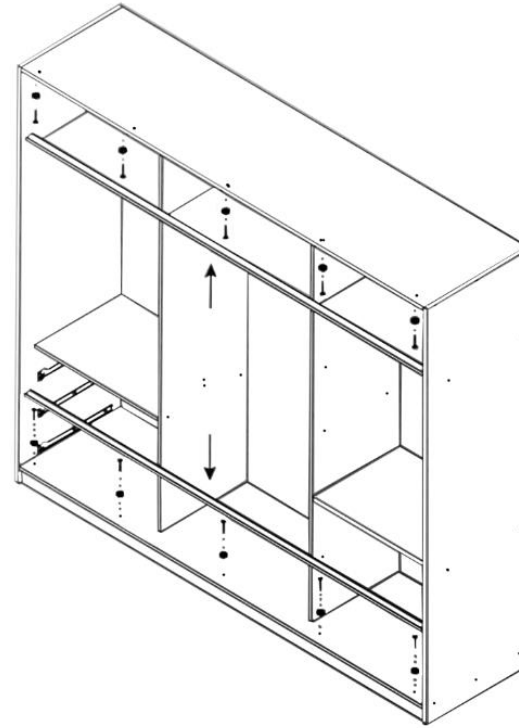


2

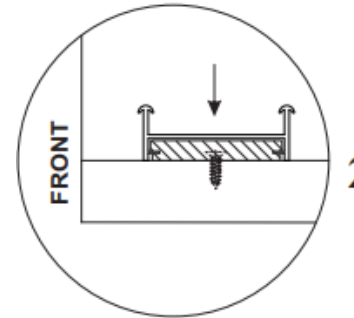


2

8

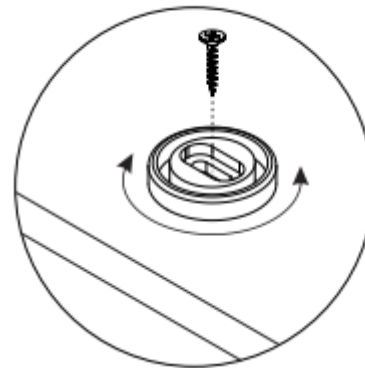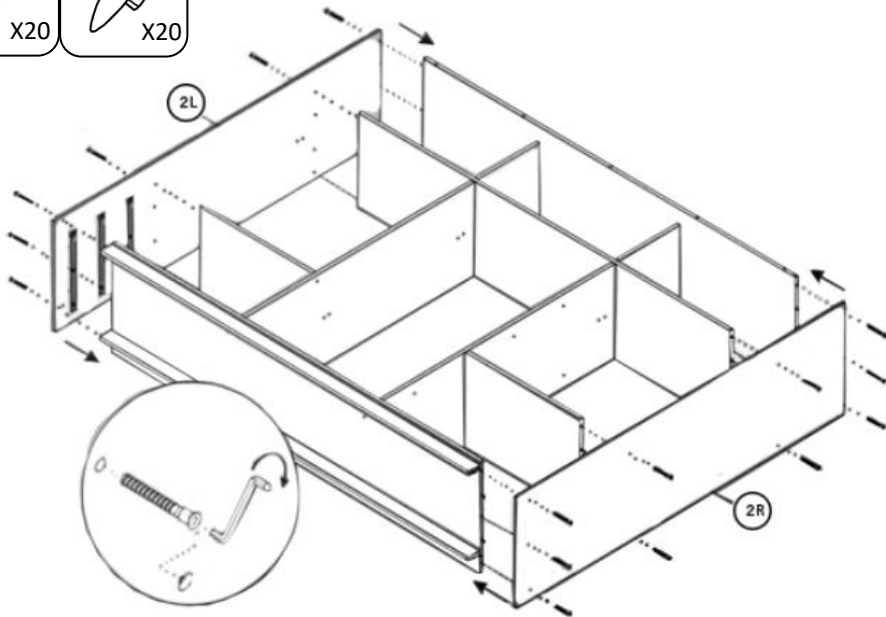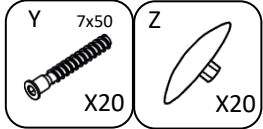

1

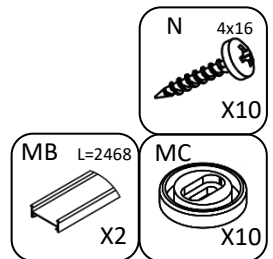

10

ZI X28

S L=2058 X1

NB 3x20 X28

X 45gr

A=B

11

B X12

C 15x12 X12

Y 7x50 X6

SB X1

N 4x16 X18

A 8x35 X6

X X15

OE X3

GC L=450 X3

A=B

12


TK X8

SC2 L=955 X2

NC 3x16 X16

SC1 L=733 X2







ZD 5mm X12

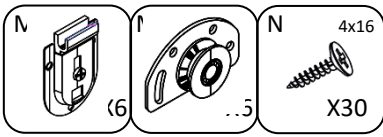


13



x3

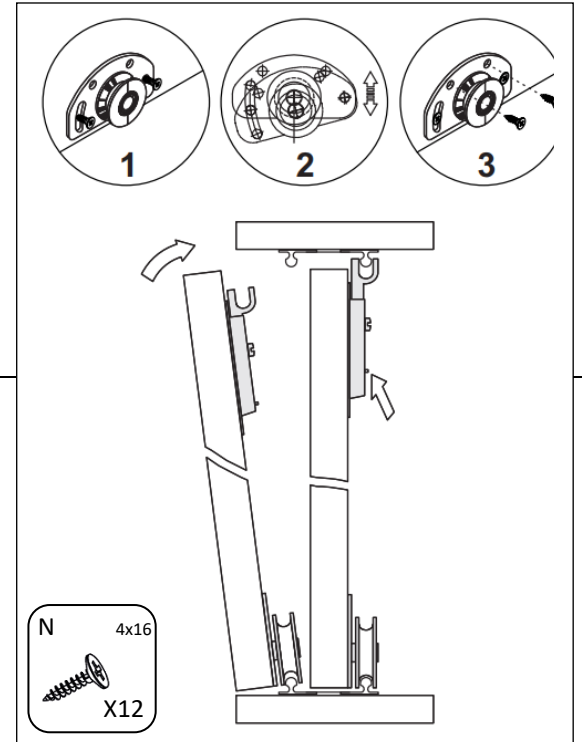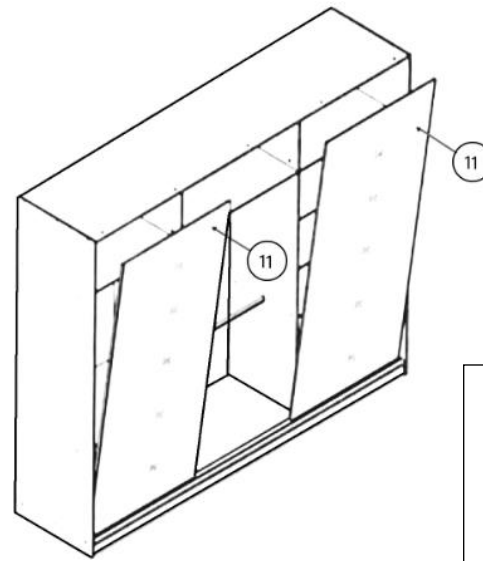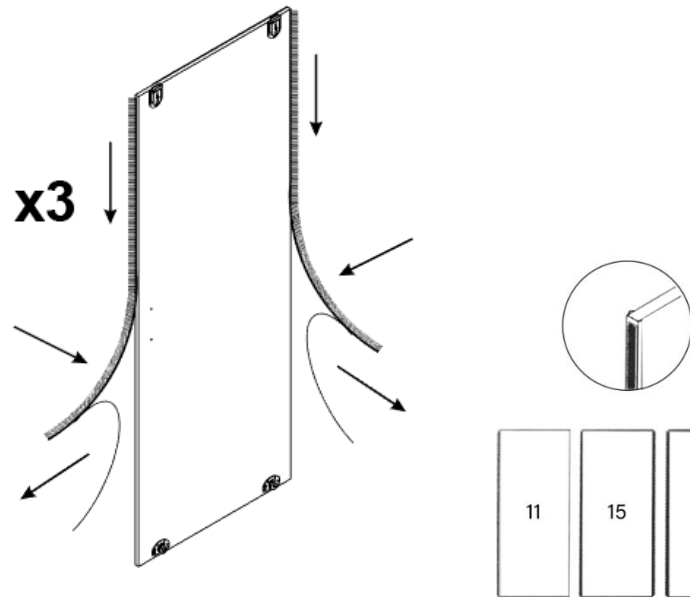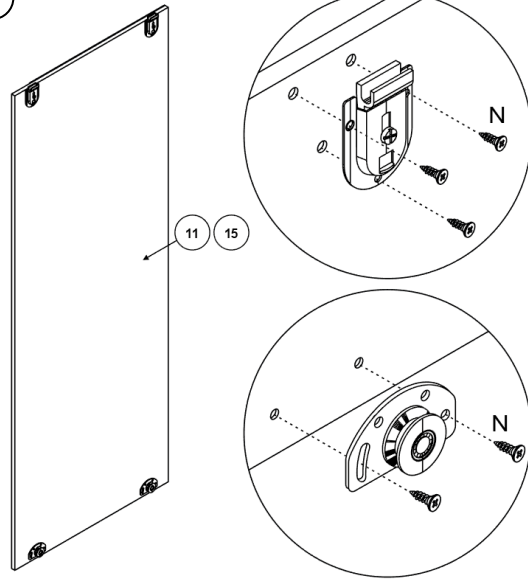

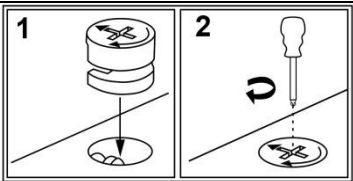

16

